


R01

- Colonna di guida liscia (standard europeo)
- Smooth guide Pillar (european standard)

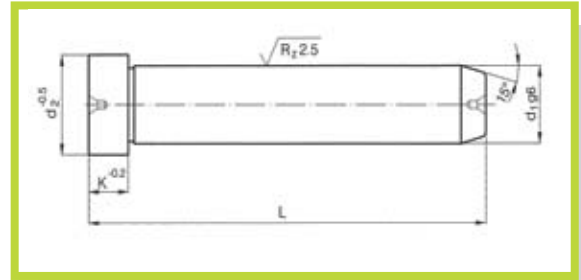


Materiale: 1.7139 Tempra
Material: 1.7139 Hardened
Trattamento termico: Cementazione + Tempra
Heat Treatment: Cementing + Hardening

Esempio di ordinativo: R01 x d1 x L
Example of purchasing order: R01 x d1 x L

K	d2	d1	Lunghezza / Length L																				
			40	50	60	80	100	120	140	160	180	200	220	240	260	280	300	320	340	360	400	420	500
3	10	8	•	•	•	•	•																
	12	9	•		•	•	•	•															
6	16	10	•		•	•	•	•															
	18	12	•		•	•	•	•	•														
8	20	14			•	•	•	•	•														
	22	15			•	•	•	•	•	•													
	24	16	•		•	•	•	•	•	•													
	26	18			•	•	•	•	•	•	•												
15	28	20			•	•	•	•	•	•	•												
	30	22			•	•	•	•	•	•	•												
	32	24			•	•	•	•	•	•	•												
	36	26			•	•	•	•	•	•	•												
	48	30			•	•	•	•	•	•	•												
	58	32			•	•	•	•	•	•	•												
	50	40																				•	•
	68	50																				•	•

R011

- Colonna di guida con due diametri calibrati (standard europeo)
- Guide Pillar with two fits (european standard)

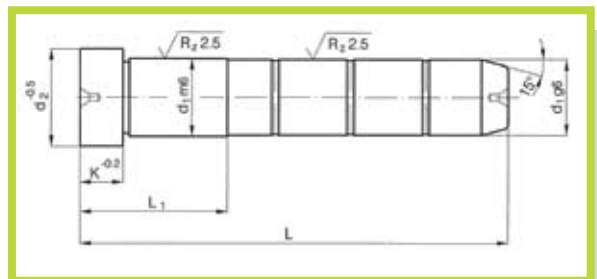

Materiale: 1.7139 Tempra
Material: 1.7139 Hardened
Trattamento termico: Cementazione + Tempra
Heat Treatment: Cementing + Hardening

Esempio di ordinativo: R011 x d1 x L
Example of purchasing order: R011 x d1 x L

K	d2	d1	Lunghezza / Length L (L1)																			
			40	60	80	100	120	140	160	180	200	220	240	280	300	320	360	400	500			
3	12	10	•	•	•	•																
6	16	12		•	•	•	•															
	18	14		•	•	•	•	•	•													
8	20	16		•	•	•	•	•	•													
	22	18		•	•	•	•	•	•													
15	24	20		•	•	•	•	•	•													
	26	22			•	•	•	•	•	•												
	28	24			•	•	•	•	•	•												
	36	30			•	•	•	•	•	•												
20	32	40																				
	48	50																				
	58	60																				