


LAT 1

- Centraggio Parallelo
- Parallel Lock

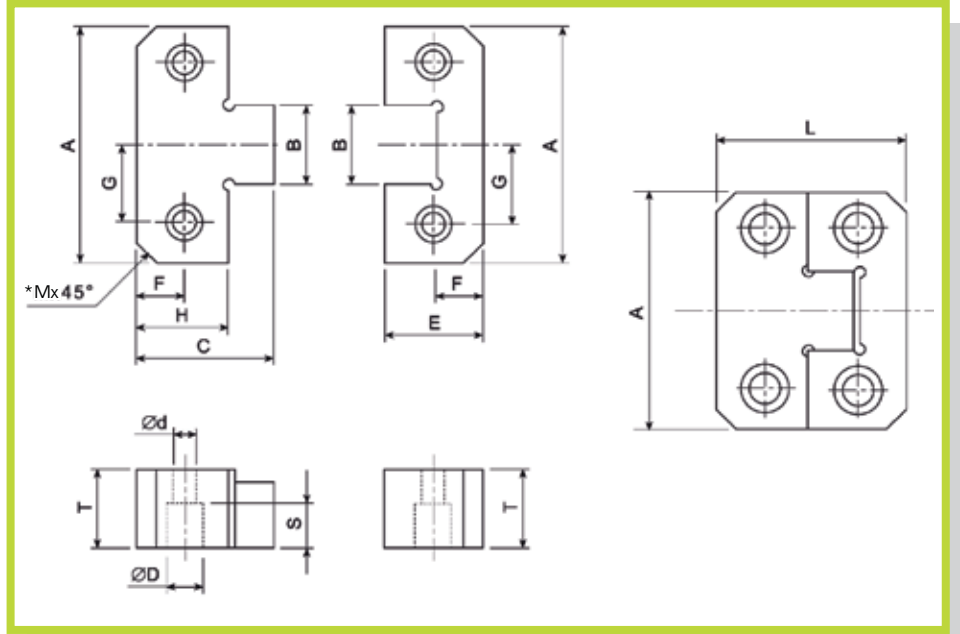

Esempio di ordinativo: Codice
Example of purchasing order: Code

Codice Code	A	L	B	C	D	d	E	F	G	H	*M	S	T
LAT 1038	38	44	12	30	10,5	6,5	22	7	11	22	5	8	13
LAT 1050	50	43	17	30	10,5	6,5	21,5	11	17	21,5	5	8	16
LAT 1075	75	72	25	50	16,5	10,5	36	18	25	36	8	12	19
LAT 1100	100	90	35	65	16,5	10,5	45	22	35	45	10	12	19
LAT 1125	125	90	45	65	16,5	10,5	45	22	42	45	10	12	25

*Disponibile anche con smussi 5x45°

*Available also with chamfers 5x45°